



ECLIPSE

INTRUDER ALARM PANELS



- Contemporary range of panels working with one and the same devices – expanders, keypads, software, etc.
- Different types of programming: by addresses, by operations or using tree structure text menus.
- Automatic addresses for all devices in a configuration.

	ECLIPSE 8	NEW ECLIPSE 8+	ECLIPSE 16	ECLIPSE 32	ECLIPSE 99
Zones on board	6 + 2 keypad zones	8 (16 with doubling)	16 on board	8 (16 with doubling)	8 (16 with doubling)
Max. Zones	8	16	16	32	99
Max. PGM Outputs	5	8 (5 on board)	8 (5 on board)	32 (5 on board)	99 (5 on board)
Areas	1	3	3	8	16
Zone doubling	No	Yes	No	Yes	Yes
Hybrid option	No	Yes	Yes	Yes	Yes
Zone 8 expander module	No	Yes	Yes	Yes	Yes
PGM 8 expander module	No	No	No	Yes	Yes
WL - Wireless expander module	No	Yes – up to 4	Yes – up to 4	Yes – up to 4	Yes – up to 4
• Number of wireless zones (PIR,MC,SR,FD,FL)	No	16	16	32	99
• Number of wireless sirens	No	3	3	32	99
• Number of wireless remote controls	No	32	32	64	99
User codes	8	32	32	64	99
Plastic box	Small	Small	Small	Big	Big
Time attendance	No	No	No	Yes	Yes
BUS devices	2 max	5 max	5 max	30 max	30 max
Certified and Approved to:	GRADE 2, class I	GRADE 2, class I	GRADE 2, Class I	GRADE 2, class I	GRADE 3, class I

